

# **OVERFILL PROTECTION**

## **UST WASTE OIL OVERFILL VALVE**

### Application -

The new 47-20-USTWO fits 4" tank openings.

With no minimum flow rate this valve can be used for a wide variety of applications.

### Part Number - 47-20-USTWO



47-20-USTWO Includes: Fill Cap (not shown) Fill Adapter 4" Adapter Coupling 47-20 Overfill Valve

Not included: Internal Riser Pipecontractor supplied length TBD by installation instructions

### Features -

- ✓ No minimum flow rate to operate
- ✓ No line shock, gradual shut-off
- ✓ No float hang up
- ✓ Prevents overfills in tanks reducing contamination and costly clean-up
- ✓ Completely automatic operations
- ✓ Easily retrofitted to existing tanks
- 4" NPT tank opening
- ✓ 55gpm at 3OPSI
- ✓ 10PSI = 100gpm
- ✓ Max 100PSI
- ✓ Max 150 Centistokes

# Replacement Parts Part Number Description

49-C	2" Fill Adapter
49-CAP	2" Fill Cap
40 D	011 411 4 1 4 0

**Optional funnel** 

49-D 2"x 4" Adapter Coupling 47-USTF UST Waste Oil Funnel

### Construction -

- Hard coated aluminum
- · Reinforced closed cell float
- · Buna gaskets

Model#

Weight (lbs.)

47-20-USTWO UST Waste Oil Overfill Valve 5.6 lbs
47-20-USTWOF UST Waste Oil Overfill valve w/ Funnel 6,9 lbs

Notice: Universal Valve Co., products must be used in compliance with applicable federal, state, and local laws and regulations. Product selection should be based on physical specifications and limitations and compatibility with the environment and material to be handled. Universal Valve Co., makes no warranty of fitness for a particular use. All illustrations and specifications in this literature are based on the latest production information available at the time of publication. Prices, materials, and specification are subject to change at any time, and models may be discontinued at any time, in either case, without notice or obligation.



# UNIVERSAL

### **UNIVERSAL VALVE COMPANY, INC.**

478 SCHILLER STREET, ELIZABETH, NEW JERSEY 07206 (908) 351-0606 FAX: (908) 351-0369



### 47-20-USTWO

UST Waste Oil overfill valve.

### 47-20-USTWOF

Available with optional Funnel

#### **47-USTF**

**Funnel Assembly** 





### 47-20-USTWO

Includes:

Fill Cap (not shown)

Fill Adapter

4" Adapter Coupling

47-20 Overfill Valve

Not included: Internal Riser Pipe-contractor supplied length TBD by installation instructions



Inside typical UST Spill container

Typical UST Spill bucket. Showing Riser pipe that attaches to the 4" fitting on the UST.







## **UNIVERSAL VALVE COMPANY, INC.**

478 SCHILLER STREET, ELIZABETH, NEW JERSEY 07206 (908) 351-0606 FAX: (908) 351-0369









Upon Installation Valve will extend all the way into the Tank

