



# UNIVERSAL VALVE COMPANY, INC.

478 Schiller St, Elizabeth, New Jersey 07206  
908-351-0606 Fax: 908-351-0369

## Specifying the Proper Length 37 & 38 Series Ball Float

### Step 1:


Determine Dimension **A**: Consult the tank chart (provided by the manufacturer) to determine the distance that corresponds to 10% of the total tank capacity for 37 or 38 Ball float.

### Step 2:

Determine Dimension **B**: Measure the dimension from the inside top of the tank to the 4" threaded tank "bung" fitting

### Step 3:

Add measurements **A** and **B**. Then subtract  $\frac{1}{4}$ " and round up to the nearest length ball float.

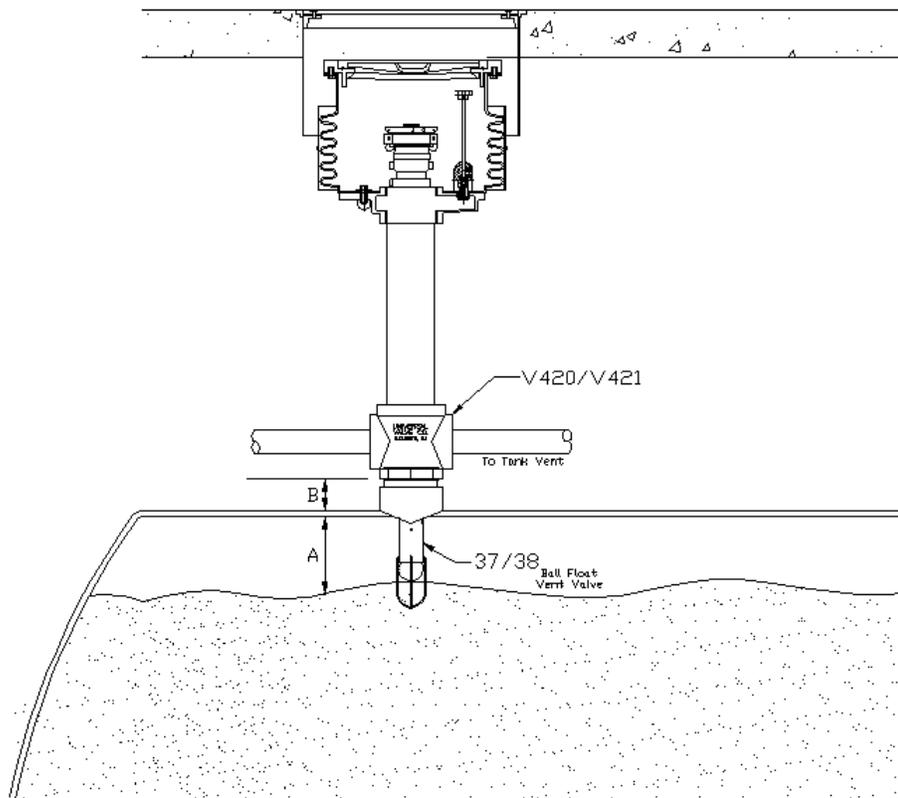

**\*\*\*Please Note – Only to be used in non-pressure delivery.**



SERVICE STATION VALVES, FITTINGS, MANHOLES, VAPOR RECOVERY EQUIPMENT & ACCESSORIES.  
WORLDWIDE DISTRIBUTION TO THE INTERNATIONAL PETROLEUM DISPENSING MARKET.