


Installation Instructions Model: 880/882

The model 880/882 is typically mounted next to a dispenser or pump.

1. Align the square body on the nozzle side of the dispenser as close to the dispenser as possible leaving enough room for the mounting bracket to fit between the dispenser and the body.
2. Mark the dispenser where the mounting bracket will be mounted.
3. Drill a 3/8" clearance hole through the dispenser to mount the mounting bracket with a 5/16" bolt (not provided)
4. Align unit, with mounting bracket in place, to the dispenser and bolt mounting bracket.
5. Make sure unit is plumb and mark the outside hole of the baseplate on the island pad.
6. Remove bolt holding the base plate, slide body out of the base plate and mark inside hole of the base plate.
7. Anchor base plate securely with (2) anchor bolts (not included).
8. Reinstall body into base plate, tighten all bolts.

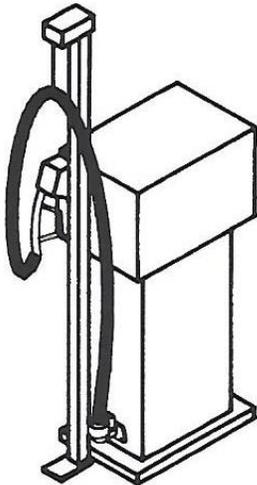

Universal Valve Co. Inc
478 Schiller St
Elizabeth, NJ 07206
800-223-0741 (O)
908-351-0369 (F)
www.universalvalve.com
sales@universalvalve.com