



The Best For Over 85 Years!

TOTAL OVERFILL PROTECTION

TESTABLE UST OVERFILL VALVE

Application -

Prevents overfills and fuel spillage when fueling underground tanks. Testable functionality without removing the over fill valve from the riser pipe.

Part Number - 39T



One moving part

UNIVERSAL Advantage

Only Universal has one moving part to eliminate any line shock. This valve is designed to shut off gradually when the fuel reaches a pre-determined level, preventing line shock during gravity drops. When there's no line shock, there's no stress put on the system.

Features-

- ✓ Faster deliveries with less restriction
- ✓ Only one moving part
- ✓ Easily retro-fitted in existing tanks
- ✓ Completely automatic operation
- ✓ Easy field installation without breaking ground
- ✓ Enables manual gauging of tank
- ✓ No minimum flow rate required for shut off


Construction -

- Cast aluminum body
- Stainless steel shaft
- Aluminum internal components
- Reinforced closed cell float
- Spring steel pre-trip mechanism
- Thrust bearing
- Teflon washer

Model#	A	B	C	D	E	Weight (lbs.)
39-04T	4"	18"	10"			6
39-0508T	4"	18"	10"	5'	8'	21
39-0710T	4"	18"	10"	7'	10'	30

Replacement Parts

Part Numbers	Description
39-11	Screw For Spring
39-12	Body O-Ring
39-13	Set Screw (Coupling Nut)
39-17	Body Screw
39-18	Adhesive Pack
39-19	Coupling Nut
39-2	Float
39-INS	Installation Kit

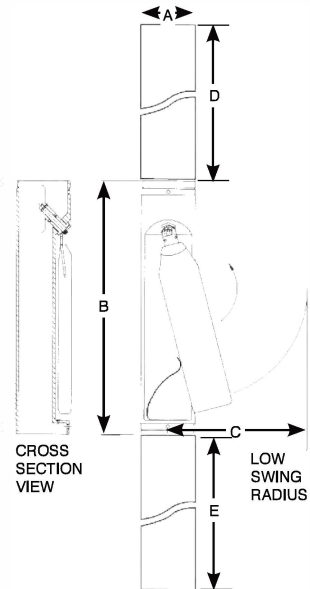

Testing Tools:

39-T	5' Long Testing Tool
39-TXL	10' Long Testing Tool

IMPORTANT: In order to prevent product spillage from the Underground Storage Tank (UST), properly maintained delivery equipment and proper connection at the tight-fill adapter are essential. Delivery personnel should be managed and trained to inspect delivery elbows and hoses for damaged and missing parts. They should always make certain there is a positive connection between the adapter and elbow. If delivery equipment is not properly maintained, or the elbow is not securely coupled to the adapter, a serious spill may result when the 39-04 closes, causing a hazard and environmental contamination.

NOTE: The Universal Valve 39-04 is designed for use on tight-fill gravity drop applications only. Do not use for pressure fill applications.

Notice: Universal Valve Co., products must be used in compliance with applicable federal, state, and local laws and regulations. Product selection should be based on physical specifications and limitations and compatibility with the environment and material to be handled. Universal Valve Co., makes no warranty of fitness for a particular use. All illustrations and specifications in this literature are based on the latest production information available at the time of publication. Prices, materials, and specification are subject to change at any time, and models may be discontinued at any time, in either case, without notice or obligation.

UNIVERSAL VALVE COMPANY

478 Schiller Street, Elizabeth, NJ 07206 • (800) 223-0741 • (908) 351-0606 • Fax: (908) 351-0369 • universalvalve.com

© 2020 Universal Valve Company, Inc.